



Pressure Differential Switch

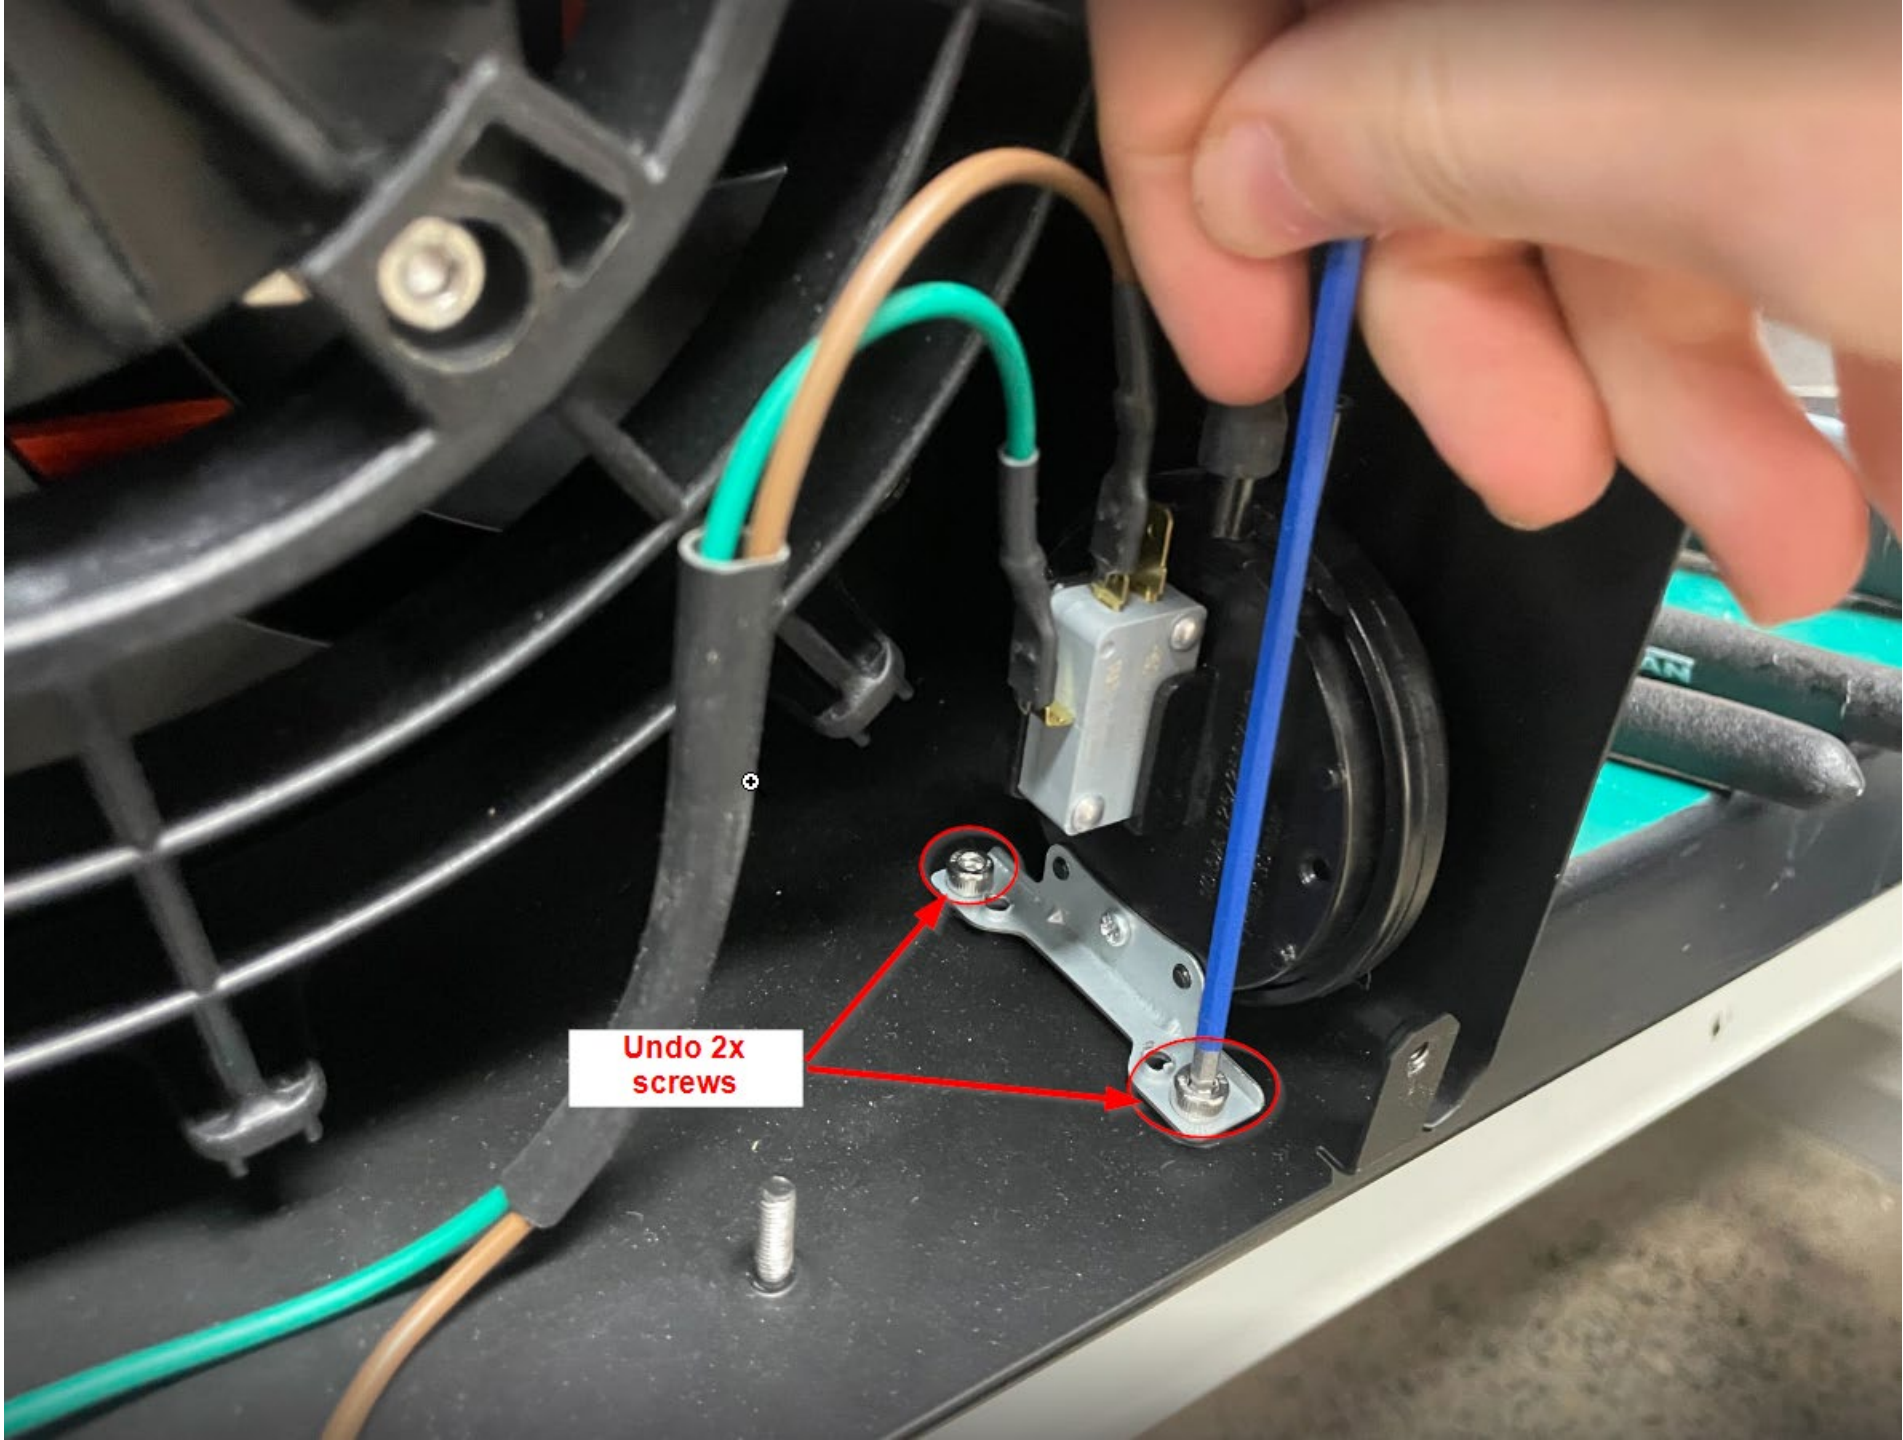

Undo 2x
screws

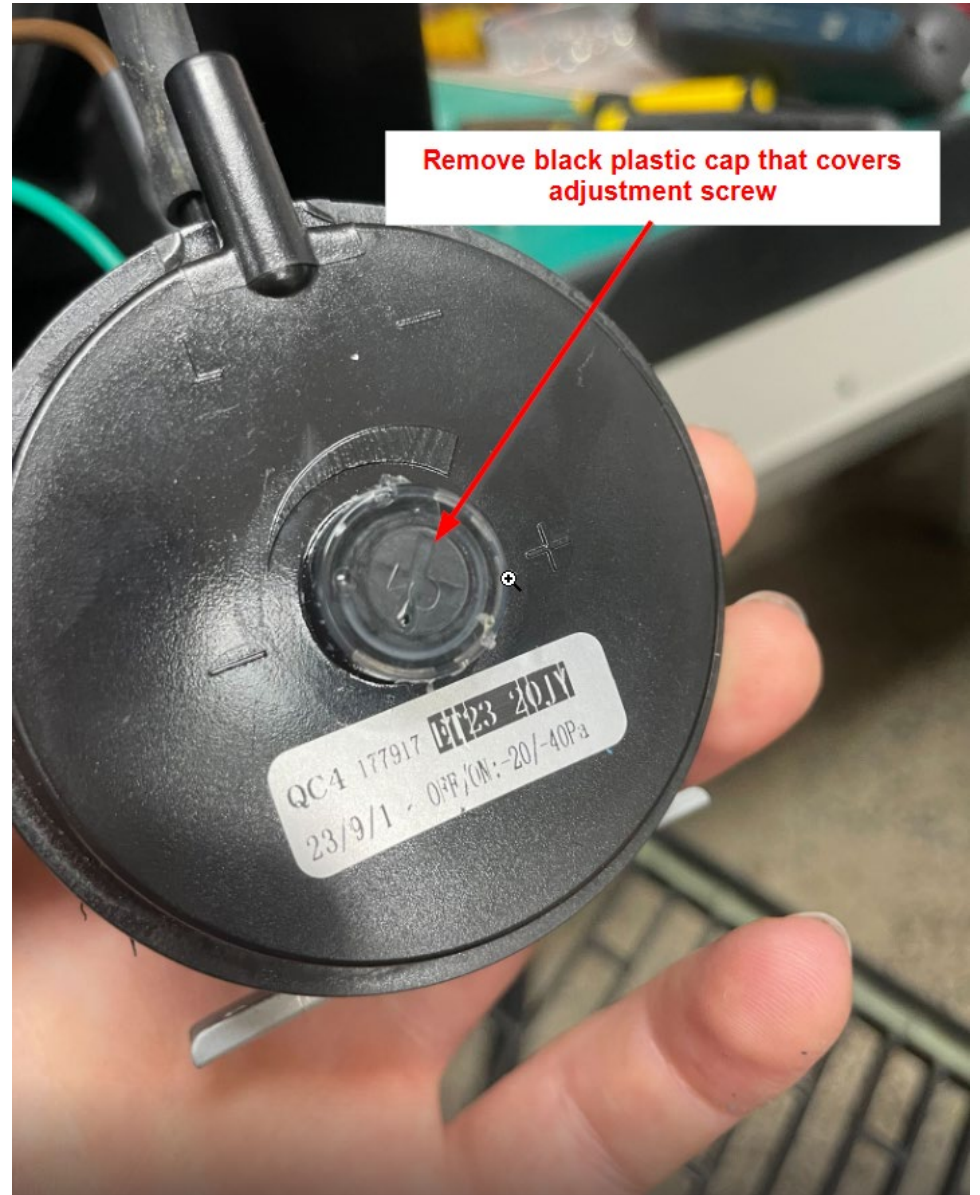

Use a screwdriver to break through glue, Rotate the adjustment screw 1/4 turn counterclockwise



Reassemble Device and Test operation, If problem persists, disassemble again and rotate adjustment screw a further $\frac{1}{4}$ turn.